








ADVANCED PARAMETER SETTING

(FOR AUTHORIZED PERSONNEL ONLY)

CHANGING THE SETTINGS FOR WATER PUMP CONTROL

1. Simultaneously press  +  and hold for 5 seconds. You will enter the advanced settings mode. The value “P0 0” will show on the display.



2. Press  to change the parameter. The “0” value will flash.
3. Using  or  adjust the value to “2” and press  to store the value. Then press  to return to the previous screen.
4. The new parameter value will be “P0 2”.

**NEVER CHANGE ANY OTHER PARAMETER THAN P0 – DANGER OF
SERIOUS DAMAGE OR EVEN DESTRUCTION OF THE HEAT PUMP!**

CORRECT VALUES FOR FUNCTION PARAMETERS

In case you accidentally changed any other value than P0, immediately check all parameters and return them to their correct values as listed below.

You can browse the parameters using ▲ or ▼ .

CORRECT VALUES OF RUNNING PARAMETERS:

Code	Parameter	Correct Value	NOTICE
P0	Water pump control	0 = always ON 1 = temp control 2 = time + temp control	The value “2” is the correct setting for proper water pump control
P1	Timer	60 min	!!! BEWARE !!! NEVER CHANGE ANY OTHER VALUES THAN “P0” – DANGER OF SERIOUS DAMAGE OR COMPLETE DESTRUCTION OF THE HEAT PUMP
P2	Defrost - Compressor running time	35 min	
P3	Defrost - Initialization temp	-7 °C	
P4	Defrost - Duration	12 min	
P5	Defrost - Termination temp	13 °C	
P10-P20	THESE PARAMETERS CANNOT BE MODIFIED		