


RV 4400 (Vortex3.2)

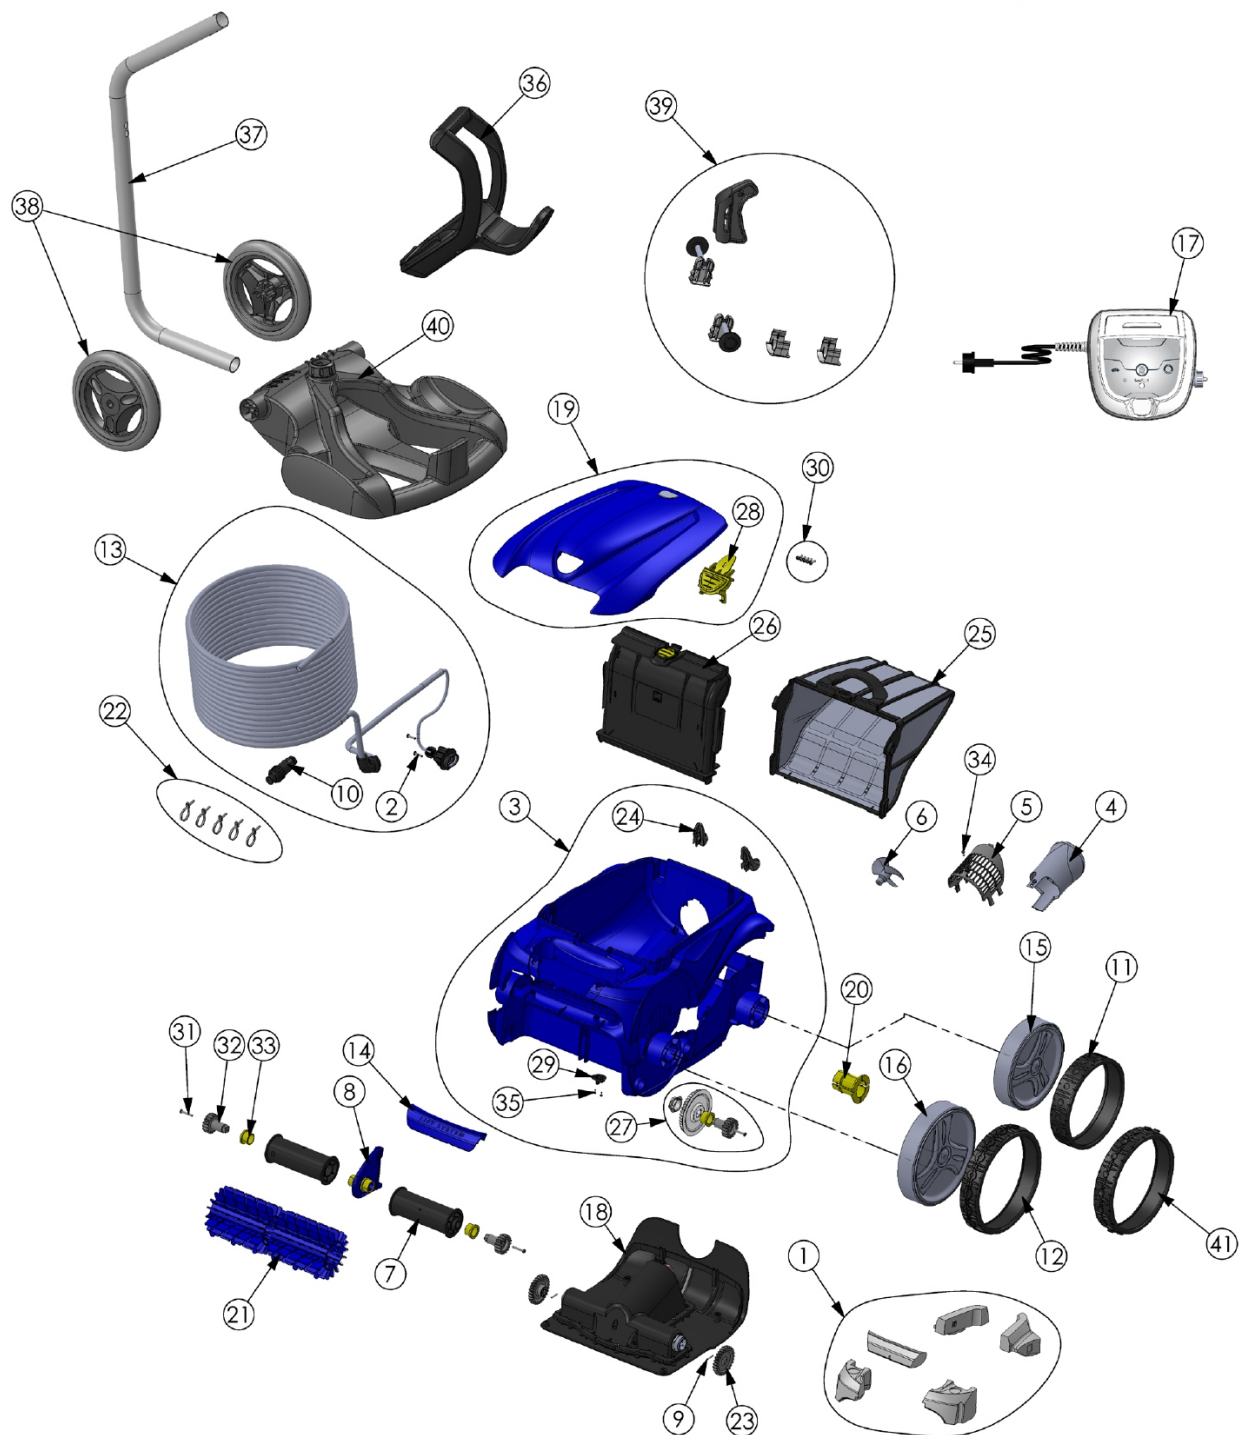

RV 4400 (Vortex3.2)

detail	identifikace	popis
1	WR0539700	Float
2	WR0608500	Screw 4*16mm (set of5)
3	WR0589100	Main housing 2wd ii
4	WR0517500	Flow outlet
5	WR051760	Motor screen
6	WR0517000	Propeller
7	WR0517400	Brush roller
8	WR0518700	Roller support
9	WR0567800	Motor block shaft pin (set 5)
10	WR0565600	Floating cable plug
11	WR0636300	Tire rear black zodiac
12	WR0636201	Tire large black zodiac
13	WR0516800	Floating cable 18m
14	WR0636500	Handle pms295 ls
15	WR0636100	Rim rear r9022 zodiac
16	WR0636001	Rim large r9022 zodiac
17	WR0636900	Control unit type 1v
18	WR0637800	Motor block type a
19	WR0544700	Hood blue
20	WR0636700	Wheel bushing zodiac
21	WR0635900	Zodiac brush (set of 2)
22	WR0567900	Floating cable clamp (set of 5)
23	WR0518800	Drive gear (set of 2)
24	WR0518100	Roller (set of 2)
25	WR0636600	Fine filter v
26	WR0517700	Filter canister support
27	WR0517200	Transmission
28	WR0638700	Cover latch grip pms 108
29	WR0519000	Rampe
30	WR0516700	Screw 4*12 mm (set of 5)
31	WR0638900	Screw 4*25 mm (set of 5)
32	WR0639000	17 Gear (*2)
33	WR0639100	Outer bearing (*2)
34	WR0639200	Screw 2,9*9,5 Mm (set of 5)
35	WR0564500	Screw 2,2*6,5Mm (*5)
36	WR0565000	Caddy handle

detail	identifikace	popis
37	WR0565200	Caddy tube
38	WR0565100	Caddy wheels (*2)
39	WR0564900	Caddy accessories
40	WR0564800	Caddy base
41	WR0636400	Tire large tile zodiac